

- WARRANTY -

1. We hereby guarantee the product as follow in accordance with the regulation of consumer damage compensation.
2. In case of failure of the product, please inform the distributor where you purchased the product.
3. Product warranty will be effective for 5 years since the product has been discontinued.

Product Name			Warranty Period
Model Name			One (1) year since the date purchased
Date Purchased			
SER. No.			
Customer's Address	Name		
	Tel.No		
Distributor's Address	Name		
	Tel.No.		

Regarding Product Warranty Regulation...

1. We will repair the product at free of charge in case it was failed under the normal operating condition in accordance with the user guide during the warranty period.
2. Although it is within the warranty period, we will charge the repair service fee etc. (repair + product + travel expense) if it falls under the following cases.

Voiding warranty

1. Defects occurred from the user's careless handling
2. Defects occurred from the usage with incorrect power voltage (E.g., 220V was used to the 110V product.)
3. Defects occurred from the improper repair done by the person other than our service engineer.
4. Defects occurred from Force Majeure (fire, salt, flood, etc.)
5. Failure or damage due to the drop, etc. (user's mis-handling) during the operation after installed
6. Defect occurred from the interior modification at user's discretion
7. In case the life cycle of the part expired

Mail, email or fax the warranty form to:

YOUR LOCAL DEALER FIRST where you bought this appliance

If your dealer is unable to assist you



94, Robot land-ro 249beon-gil, Seo-gu, Incheon, Korea
www.lsdaewon.co.kr

dib

LIFE STYLE DESIGNER

User's Guide

This user's guide contains the product warranty certificate.
 Be sure to read this user's guide carefully before use.

220V ~ 240V, 50/60Hz

www.lsdaewon.co.kr

DIB-100 Series

DIB-140/120/100

dib...

**THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.**

Notes

1. This product should be installed according to this manual.
2. Please read this manual carefully and install properly.
3. Please save this manual and place it at an easily accessible place.
4. Do not attempt to service this appliance yourself. Doing so could void warranty.

CONTENTS

1. Safety Instructions	4	Preparation
2. Product Characteristics	8	
3. Designation of Each Component	9	
4. Installation	11	Installation
5. Trial Operation	13	
6. How to Use the Product	14	Operation
7. User Settings	18	
8. Maintenance & Cleaning	20	Maintenance & Cleaning
9. Before requesting repair	21	
10. Product Specifications	22	
11. Comparison Chart	23	
12. Warranty	24	

01. Safety Instructions

● Each symbol refers to the followings:



 
 
 
 
Warning Risk of electric hazard when violating the instructions



Caution Risk of injury or material damage when violating the instructions

● Each pictorial indication means the followings:

means prohibition



means obligation



Warning


Disassembly, modification or repair is not allowed.

► Risk of electric shock or fire.



Don't plug or touch the power cord with wet hands.

► Risk of electric shock.

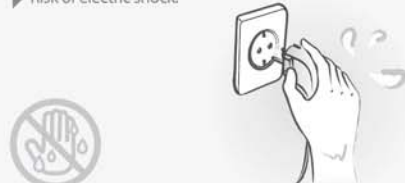

Don't spray water on the main body of product or power plug.

► Risk of electric shock or fire



Don't use the damaged power cord or outlet.

► Risk of electric shock or fire



Warning

Don't fail to do grounding.

- Always use the outlet that encloses the earth electrode (Earth terminal mounting outlet-check if there is earth or not).
- In case there is no earth electrode, do grounding separately.
- When it is not grounded, it causes the failure and electric shock.



Insert the power plug correctly in 220~240V exclusive outlet.

► Risk of heat or fire.




Don't locate the cigarette or flammable materials near the product; Don't throw the cigarette into the product.



Don't connect the product to the water pipe of industrial use.

► Risk of causing dermatitis of user.

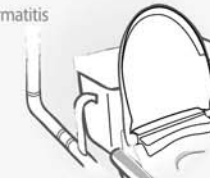

Don't connect power to the product before its complete installation on the toilet.



When the power cord or plug is damaged, always inform the service center, and replace if required.



Don't block the hot air hole nor put any object or hand on the hole.

► Risk of burn or electric shock. (DIB-120,140 only)



When removing the product from toilet, always release the power plug first.

► Risk of electric shock.



01. Safety Instructions

⚠ Caution


Don't stand on the product ; don't put heavy object on it.

► Risk of injury or damage to the product.



Don't force to close the cover of toilet.

► Risk of failure.

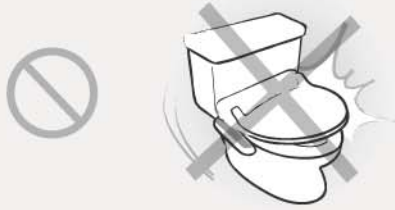

Don't force to lean against the cover of toilet.

► Risk of failure.




When cleaning, don't use toilet-use detergent, benzene, thinner, etc.

► Risk of damage to the product or crack.




Don't bend the connecting hose ; don't force to pull it out.

► It may cause stoppage of water supply or leakage.

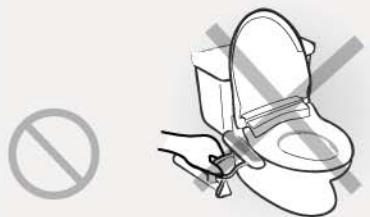

Be cautious of low temperature burn.


► When the skin has been in contact with a low temperature hot surface for a long time, it may cause low temperature burns. The seat temperature should be set on Low or Off when the unit is used by children, elderly persons or persons who can not control temperature themselves.

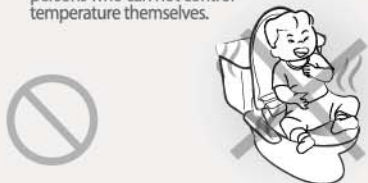

⚠ Caution

When the product is not used an extended period of time, remove the power plug and drain the water out of the product tank.

► It may cause the water rotten and result the skin disease.

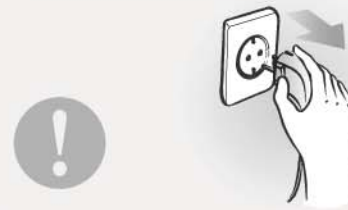

Don't use an out of order/faulty product.

► When it is out of order, remove the plug from the outlet and inform the service center.
► Otherwise, it may cause fire or electric hazard.



When installing, push it in until it sounds 'Click'.

► It may cause water leakage or mal-operation.



Don't place the removed product upside down.

► Risk of the product failure.



dib

02. Product Characteristics

dib bidet has the following characteristics:

Advanced conventional heating technology

Enjoy continuous warm water throughout the wash cycle.



Power wash

Soft but powerful water wash for added cleansing benefit.



Bubble Wash

Aerated water wash adds cleaning comfort.



Massage

Nozzle moves back and forth for massage effect.



Pulse

Pulsating wash repeatedly cycles from weak to strong.



Child Settings

Specialized nozzle position and water pressure for children.




Energy Saving Function

Two modes in energy saving function maximize energy saving effect.



03. Designation of Each Component

Main Body

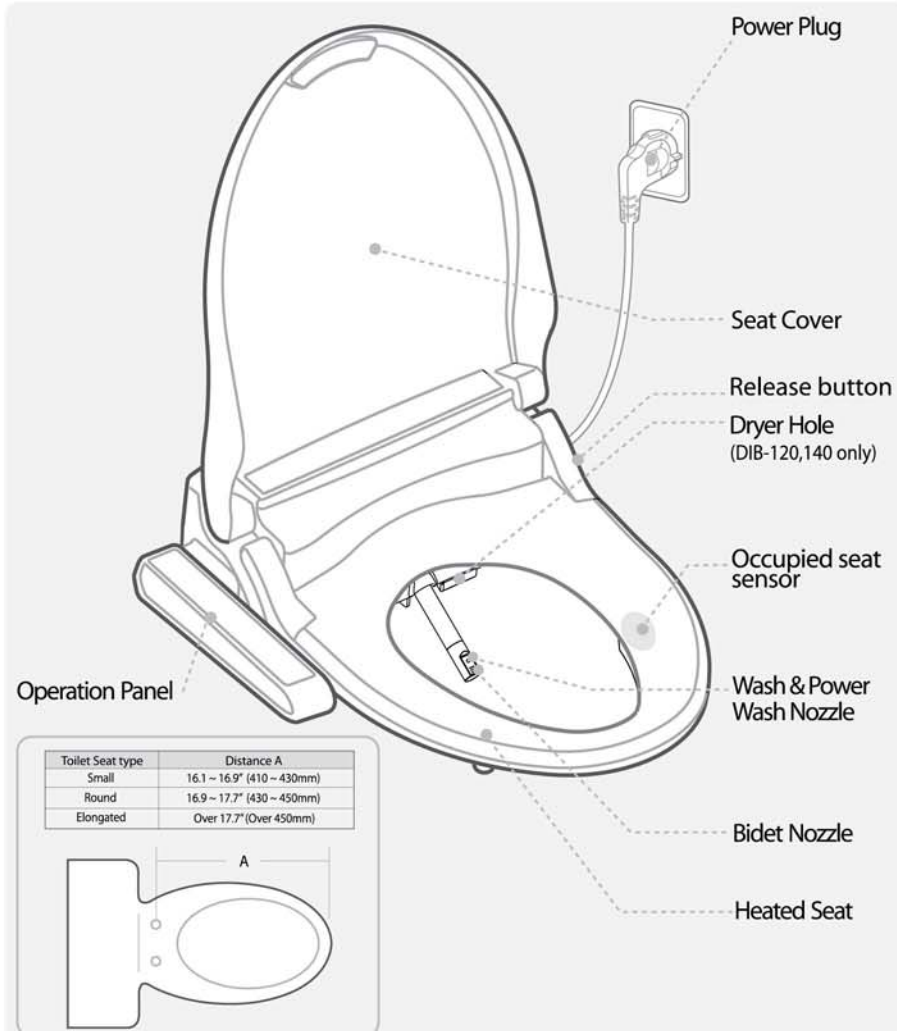


※ Occupied seat sensor


- The occupied seat sensor must be activated to operate the unit.
- The unit will work without activation of occupied seat sensor if this function is released intentionally.
- Refer to page No. 18.

03. Designation of Each Component

Operation Panel

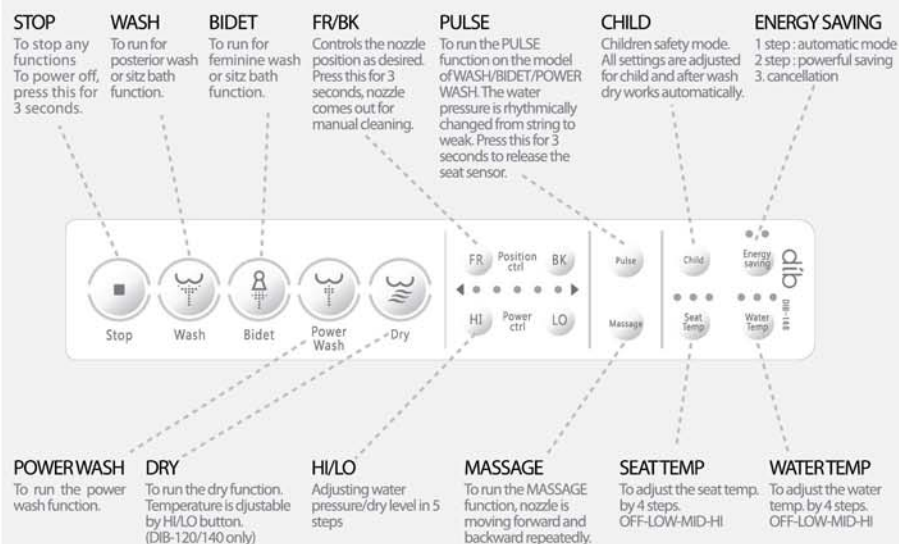

Accessories

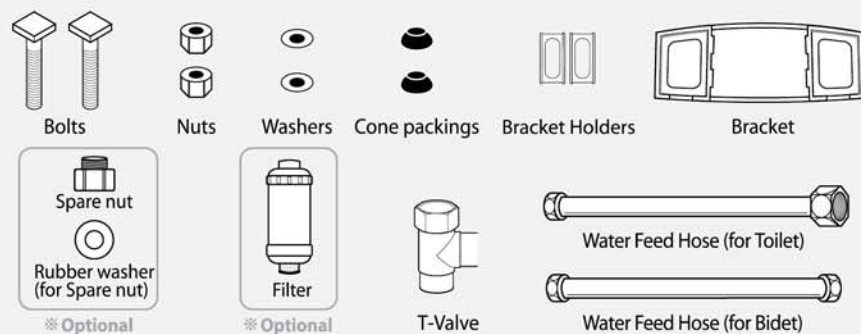

04. Installation


Order of Installation

1 Remove the seat from the existing toilet body.

- ▶ Release the nuts, and then remove the seat and cover from it.
- ▶ Keep the removed seat, cover and nuts well in a proper place.




2 Close the water feed valve by turning it clockwise, and then drain the toilet water tank out.

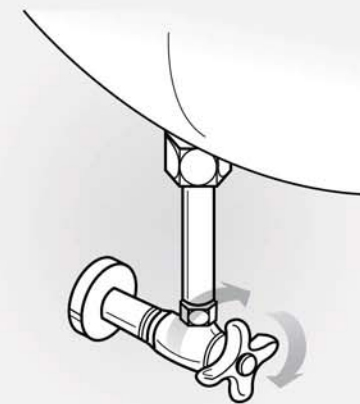


3 Remove the water feed pipe and then install T-valve.

- ▶ Keep the removed water feed pipe well in a proper place. It may be useful when moving house to other place later.

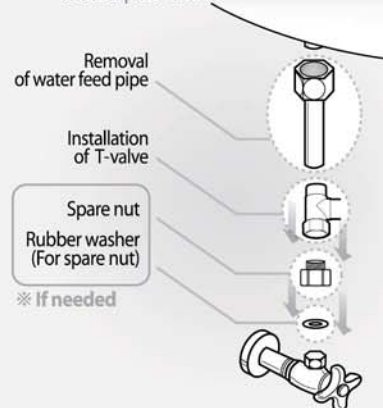


4 Connect the toilet-use hose.

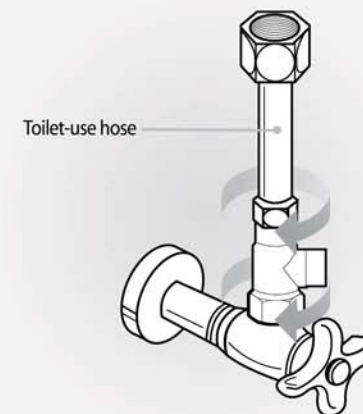


04. Installation

5 Fix the bracket onto the toilet first.

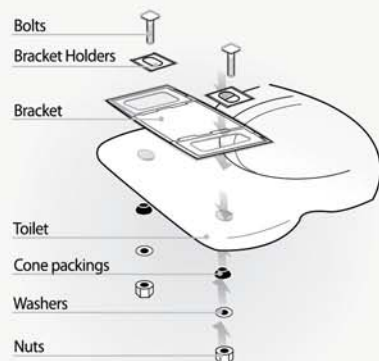


► Adjust the seat and the front part of toilet back and forth so that they can correspond with before fastening the nuts.

6 Push the main body toward the bracket completely.

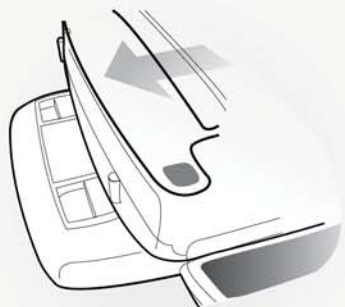


► Push it in until it sounds 'click'.
► When the product is not installed well, it may cause leakage.

7 After installing the filter onto the T-valve, connect the bidet-use hose to the bidet body.

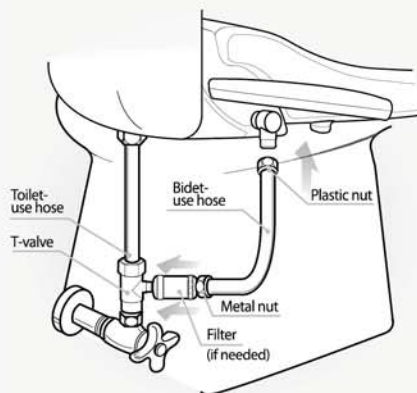


8 Insert the deodorizing cartridge into the bidet body. (DIB-140 only)

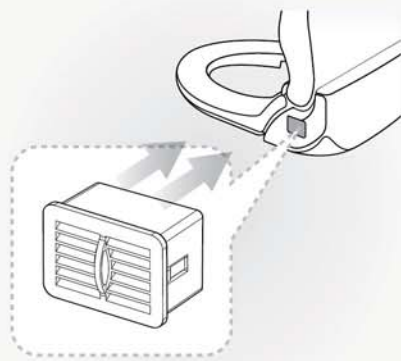


05. Trial Operation

Order of Trial Operation

1 Open the water feed valve by turning it anti-clockwise.

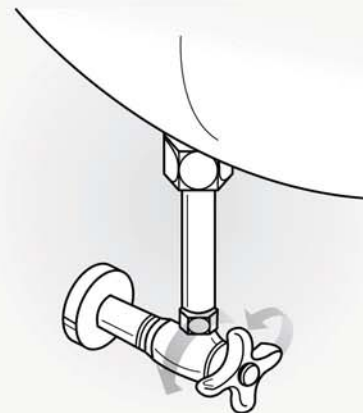

2 Be sure of no leakage around the hose connection.

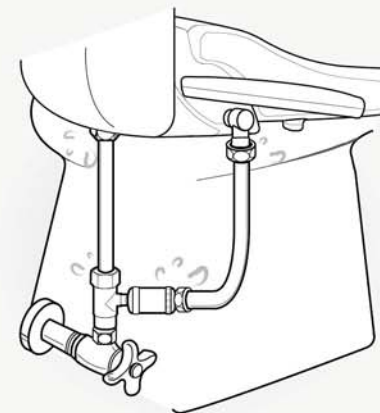


3 Be sure that nozzle comes out and retracts when powered on.

► Don't plug the power cord with wet hands.
Risk of electric shock.



4 When the unit is powered on, water tank will be filled immediately. The unit will beep until the water tank is fully filled up with water.

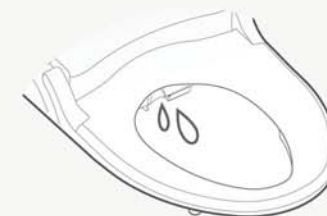

06. How to Use the Product

Basic Operation Method

1 Sit on the toilet seat.

- ▶ Be sure to sit on the user sensor of seat.
If the sensor is not occupied, functions will not work.



2 Press WASH, BIDET, Power wash buttons.

- ▶ Selected function can be used as desired.
- ▶ Sitz bath is possible in the mode of WASH and BIDET.
Press WASH or BIDET button again for sitz bath.
e.g.) WASH + WASH = WASH SITZ BATH
BIDET + BIDET = BIDET SITZ BATH



3 Press the DRY button

- ▶ Hot air indicator lamp will light on.
- ▶ Dryer works for 3 minutes.
- ▶ It is recommended to wipe out the water on your bottom before operating the dry function for improving dry effect. (DIB-120, 140 only)



4 Press the STOP button.

- ▶ Any operation will stop.
- ▶ Press STOP for 3 seconds to turn off the unit while not seated.



5 MASSAGE Wash

- ▶ When Pressing the MASSAGE button, nozzle location will be changed back and forth to wash the wider range.
- ▶ Press this button for 3 seconds to release the occupied seat sensor intentionally.



6 PULSE Wash

- ▶ When pressing PULSE button during the operation of WASH, BIDET and Power wash, water pressure will repeat HIGH/LOW level for smooth pulsating wash. (Massage is not available in Sitz bath mode)



7 Water Pressure Control

- ▶ Pressing HIGH/LOW button enables the control of water pressure.
- ▶ When any foreign material blocks the water filter, it may cause the low water pressure. Regularly check the water and screen filter.



8 Nozzle Position Control

- ▶ Nozzle position can be controlled by pressing FR/BK.



06. How to Use the Product

Basic Operation Method

9 CHILD Function

- ▶ All settings are adjusted for child and after wash dry works automatically.
- ▶ Nozzle moves forward more than adult wash.
- ▶ Water pressure is weaker than adult wash.
- ▶ Seat temperature is set at lower than adult setting.

Child

10 Seat Temperature Control

- ▶ When pressing the SEAT TEMP. CONTROL button, the temperature of seat can be controlled within the range of room temperature, OFF-LOW-MID-HI

Seat Temp

11 WATER TEMP CONTROL

- ▶ When pressing the WATER TEMP. CONTROL button, the temperature of water can be controlled within the range of room temperature, OFF-LOW-MID-HI

Water Temp

12 ENERGY SAVING Function

- ▶ Automatic Energy Saving Function
 - # When pressing the button once, it enters into automatic energy saving mode (Yellow LED lamp lights on)
 - # Seat temperature will be kept at 32°C.
 - # When sitting on the seat to use bidet, it turns to the pre-designated temperature; When getting out of the seat, it returns to the automatic energy saving mode.
- ▶ Power Energy Saving Function
 - # When pressing the button twice, it enters into the Power Energy Saving mode. (Green LED lights on)
 - # Seat will not be heated at all for maximizing energy saving effect.
 - # When sitting on the seat to use the product, it turns to the pre-designated temperature. As soon as leaving the seat, it returns to power energy saving mode.
- ▶ When pressing the button three times, the energy saving mode will be released.

13 Nozzle Cleaning

- ▶ While not sitting on the seat, and pressing the FR button three seconds, the nozzle will move forward at its maximum distance so that the user can clean it easily (It will return after 2 minutes)
- ▶ When pressing STOP button, the nozzle will return and operate self-cleaning operation.

Longer than
3 seconds

FR

14 Deodorizing function (DIB-140 only)

- ▶ When sitting on the seat, automatically the deodorizing function starts.
- ▶ After the usage of bidet, the deodorizing function will operate for one (1) minute.
- ▶ Automatic deodorizing function can be released by pressing STOP + Energy saving button while not seated.



Consult your doctor before using Power Wash function in situations of anal disease/surgery.

Do not throw away

We are committed to protect the environment. Please help us by disposing of this product in a responsible way when it reaches the end of its service life, to prevent certain substances contained in electric and electronic products from harming public health or the environment. The symbol means that the products may not be thrown away with other household waste: at the end of its service life, it may be taken at no charge to you to the waste-collection centers provided for the purpose by the authorities in your country. It may be taken to the distributor from whom you purchase a new product that is equivalent to or that performs the same functions as this product. This later option may not be available in some countries.



07. User Settings

● : Seat Switch 'Off' Status ○ : Seat Switch 'On' Status ◐ : Regardless of On/Off

No	Function	Seat Status	Switch Operation	Description	Initial Status
1	Operating Signal Cancel	●	Press MASSAGE for 3 sec.	Use when turning off the operating signal	Operating Signal is turned on
2	Turning off	●	Press STOP button for 3 sec.	Press one of STOP, WASH, BIDET and POWER WASH to turn on the unit.	
3	Manual nozzle cleaning	●	Press FR button for 3 sec.	To clean the nozzle manually.	
4	Seat occupied sensor release	●	Press MSAAGE button for 3 sec.	To release the seat sensor intentionally.	○
5	Automatic deodorizing ON/OFF	◐	Press STOP button and press ENGEGY SAVING button.	To release automatic deodorizing fuction intentionally.	○

*The unit will work without activation of occupied seat sensor if occupied seat sensor is released intentionally.

*Some of functions that must be set while not seated are not available to control unless occupied seat sensor release function is released.


*Deodorizing function will not work if occupied seat sensor release is activating.

dib

08. Maintenance & Cleaning

Cleaning of Water pipe filter

- 1 Close the water feed valve by turning it clockwise.
- 2 Disconnect the water supply hose. Take the screen filter out and clean it with soft brush. (e.g. toothbrush)
- 3 After cleaning, place it back. Then connect the water supply hose.
- 4 Open the water feed valve by turning it anti-clockwise.

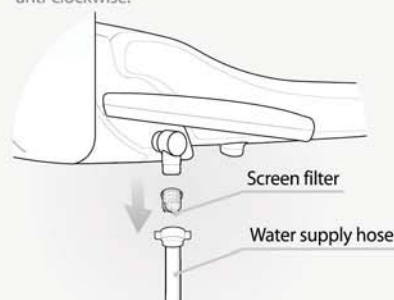

Cleaning of Bidet Body

- 1 Exterior surface of bidet is made of plastic material, which may be damaged by scrubber, chemicals, etc.
- 2 Wipe the surface with a soft cloth wet and squeezed completely. Don't spray water directly onto the surface with the bath-use shower device.
- 3 Clean the body after removing the power plug from the outlet. Be sure no water splash to the power plug or outlet.
- 4 Don't touch the power outlet with wet hand. Risk of electric shock.




Cleaning of Nozzle

- 1 Press FR button for 3 seconds while not seated. The nozzle will move forward and stop for 2 minutes.
- 2 Clean the nozzle with a unused toothbrush, etc., and press the STOP button, then it will return to the original place for self cleaning.



Drainage of Hot Water Tank

- 1 Remove the power plug from the outlet.
- 2 Close the water feed valve by turning it clockwise.
- 3 Press the release button on the side of main body. To prevent freezing, drain the water if unit is not used for extended period in winter.

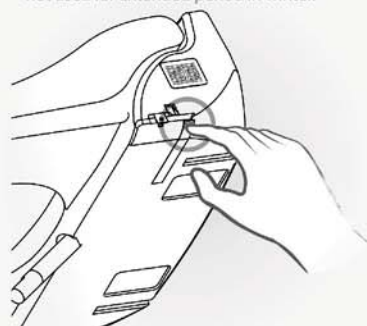

09. Before requesting repair

※ Please check the following points before requesting the repair of the product.

Signs to occur	Matters to be checked
Completely out of operation	<ul style="list-style-type: none"> • Check if the power plug is not connected. • Check the power failure.
Water does not spray out	<ul style="list-style-type: none"> • Check if the water supply is suspended. • Check if water feed valve is locked • Check if nozzle is blocked by foreign material • Check if connection hose is bent
Water pressure is low	<ul style="list-style-type: none"> • Check if water pipe filter is blocked by foreign material. • Check if the water pressure is set at too low level
Water is not warm enough	<ul style="list-style-type: none"> • Check if its temperature is set at 'Off' or 'Low'.
Seat is not warm enough	<ul style="list-style-type: none"> • Check if its temperature is set at 'Off' or 'Low'

Self-Diagnosis Table

※ When any abnormal phenomenon occurs, please refer to the following table, and inform the exact status at the time of requesting A/S service.

No	Self-Diagnosis Phenomenon	Way of Indication
1	Water temp sensor is disconnected or not inserted	LED of water temp. Yellow + Green blinking
2	Water temp sensor is short-circuited or over-heated	LED of water temp. Red + Yellow blinking
3	Seat temp sensor is disconnected or not inserted	LED of seat temp. Green blinking
4	Seat temp sensor is short-circuited or over-heated	LED of seat temp. Red blinking

10. Product Specifications


Item			DIB-140	DIB-120	DIB-100
Rated Voltage			AC 220V ~ 240V, 50/60Hz		
Max. Consumption Power			1270W		
Power Cord Length			1.5m		
Water Feed Method			Direct connection		
Water Pressure			0.7~7.5kgf / cm ²		
Wash	Feeding Volume	Wash	0.6 ℓ/min		
		Bidet	0.7 ℓ/min		
		Power Wash	0.5 ℓ/min		
	Water Pressure Control		5 levels		
	Temp. Control		4 levels (Off, Low, Mid, Hi)		
	Heater Capa.		1200W		
	Safety Device		Thermal fuse, Thermal switch, Bi-metal		
Heated Seat	Temp. Control		4 levels (Off, Low, Mid, Hi)		
	Heater Capa.		55W		
	Safety Device		Thermal fuse		
Dry	Temp. Control		Room temp.~50° C		-
	Heater Capa.		250W		-
	Safety Device		Thermal fuse, Bi-metal		-
Deodorizer			Catalytic carbon filter	-	
Product Dimension	Elongated		470mm X 528mm X 145mm		
	Round		470mm X 496mm X 145mm		
	Small		470mm X 470mm X 145mm		
Product Weight	Elongated		4.7kg [7.7kg]	4.6kg [7.6kg]	4.5kg [7.5kg]
	Round		4.6kg [7.6kg]	4.5kg [7.5kg]	4.4kg [7.4kg]
	Small		4.5kg [7.5kg]	4.4kg [7.4kg]	4.3kg [7.3 kg]

11. Comparison Chart

	Function	DIB-140	DIB-120	DIB-100
Wash/Dry Function	Wash	●	●	●
	Bidet	●	●	●
	Power Wash	●	●	●
	Dry	●	●	
	Bubble Wash	●	●	●
Convenient / Comfort Function	Automatic Energy Saving	●	●	●
	Power Energy Saving	●	●	●
	Massage	●	●	●
	Pulse	●	●	●
	Advanced conventional heating	●	●	●
	Warm Seat	●	●	●
	Soft Closing Lid & Seat	●	●	●
	Detachable Main Body	●	●	●
	Child	●	●	●
	Deodorizer	●		

■ Dimension diagrams

inch (mm)

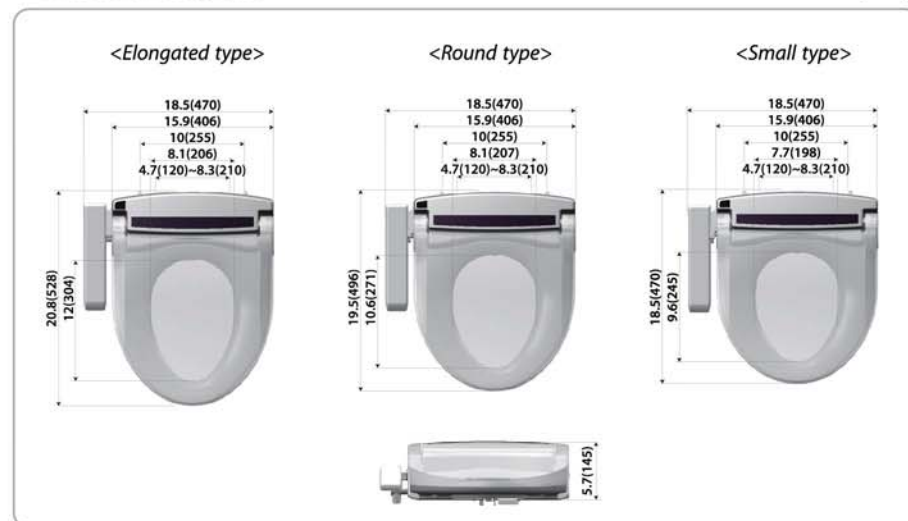

- WARRANTY -

1. We hereby guarantee the product as follow in accordance with the regulation of consumer damage compensation.
2. In case of failure of the product, please inform the distributor where you purchased the product.
3. Product warranty will be effective for 5 years since the product has been discontinued.

Product Name			Warranty Period
Model Name			One (1) year since the date purchased
Date Purchased			
SER. No.			
Customer's Address	Name		
	Tel.No		
Distributor's Address	Name		
	Tel.No.		

Regarding Product Warranty Regulation...

1. We will repair the product at free of charge in case it was failed under the normal operating condition in accordance with the user guide during the warranty period.
2. Although it is within the warranty period, we will charge the repair service fee etc. (repair + product + travel expense) if it falls under the following cases.

Voiding warranty

1. Defects occurred from the user's careless handling
2. Defects occurred from the usage with incorrect power voltage (E.g., 220V was used to the 110V product.)
3. Defects occurred from the improper repair done by the person other than our service engineer.
4. Defects occurred from Force Majeure (fire, salt, flood, etc.)
5. Failure or damage due to the drop, etc. (user's mis-handling) during the operation after installed
6. Defect occurred from the interior modification at user's discretion
7. In case the life cycle of the part expired

Mail, email or fax the warranty form to :

YOUR LOCAL DEALER FIRST where you bought this appliance

If your dealer is unable to assist you

LS Daewon
LIVING SOLUTION

94, Robot land-ro 249beon-gil, Seo-gu, Incheon, Korea
www.lsdaewon.co.kr

LS Daewon
LIVING SOLUTION

dib

LIFE STYLE DESIGNER

User's Guide

This user's guide contains the product warranty certificate.

Be sure to read this user's guide carefully before use.

120V 60Hz  

www.lsdaewon.co.kr

DIB-100 Series

DIB-140/120/100

dib...

**THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.**

Notes

1. This product should be installed according to this manual.
2. Please read this manual carefully and install properly.
3. Please save this manual and place it at an easily accessible place.
4. Do not attempt to service this appliance yourself. Doing so could void warranty.

CONTENTS

1. Safety Instructions	4	Preparation
2. Product Characteristics	8	
3. Designation of Each Component	9	
4. Installation	11	Installation
5. Trial Operation	13	
6. How to Use the Product	14	Operation
7. User Settings	18	
8. Maintenance & Cleaning	20	Maintenance & Cleaning
9. Before requesting repair	21	
10. Product Specifications	22	
11. Comparison Chart	23	
12. Warranty	24	

01. Safety Instruction

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

INSTALLATION

- In the case 120V 60Hz : Power supply must be a
- 15Amp GFCI outlet.
- The electrical cord must be at least 4ft. long.
- The electrical cord must be connected to a GFCI outlet.
- The GFCI outlet should be 1 ft. above the floor.
- Install only in well-ventilated areas to avoid excess humidity.
- Do not install in narrow toilet stalls or in shower stalls. Install only where direct contact with water is minimized.
- Do not install near any heat source.
- Avoid using extension cords if possible. Consult with a certified electrician where extension cords are necessary.

DANGER - To reduce the risk of electrocution:

- ❶ Do not use while bathing.
- ❷ Do not place or store product where it can fall or be
- ❸ pulled into a tub or sink.
- ❹ Do not place in or drop into water or other liquid. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons.

- ❶ Close supervision is necessary when this product is used by, on, or near children or invalids.
- ❷ Use this product only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
- ❸ Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
- ❹ Keep the cord away from heated surfaces.
- ❺ Never use while sleeping or drowsy.
- ❻ Never drop or insert any object into any opening or hose.
- ❼ Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- ❽ Connect this product to a properly grounded outlet only. See Grounding Instructions.
- ❾ Unplug this product before filling. Fill (reservoir) with water only unless otherwise specified by manufacturer. Do not overfill (or specify filling instructions).

SAVE THESE INSTRUCTIONS

01. Safety Instruction

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER - Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

For a grounded, cord connected product rated 15 A or less and intended for use on a nominal 120 V supply circuit. This product is for use on a nominal 120 V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure 1 temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available.

The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician.

The green colored rigid ear, lug, and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

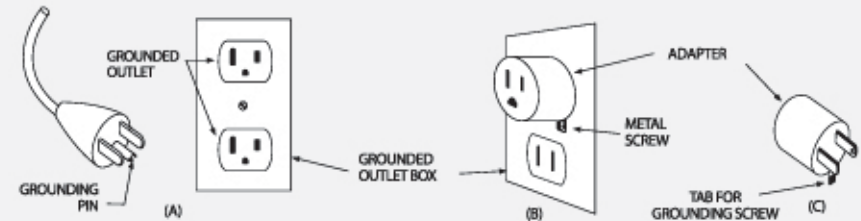


Figure 1.

02. Product Characteristics

dīb bidet has the following characteristics:

● Advanced conventional heating technology

Enjoy continuous warm water throughout the wash cycle.



● Power wash

Soft but powerful water wash for added cleansing benefit.



● Bubble Wash

Aerated water wash adds cleaning comfort.



● Massage

Nozzle moves back and forth for massage effect.



● Pulse

Pulsating wash repeatedly cycles from weak to strong.



● Child Settings

Specialized nozzle position and water pressure for children.




● Energy Saving Function

Two modes in energy saving function maximize energy saving effect.




03. Designation of Each Component

Main Body

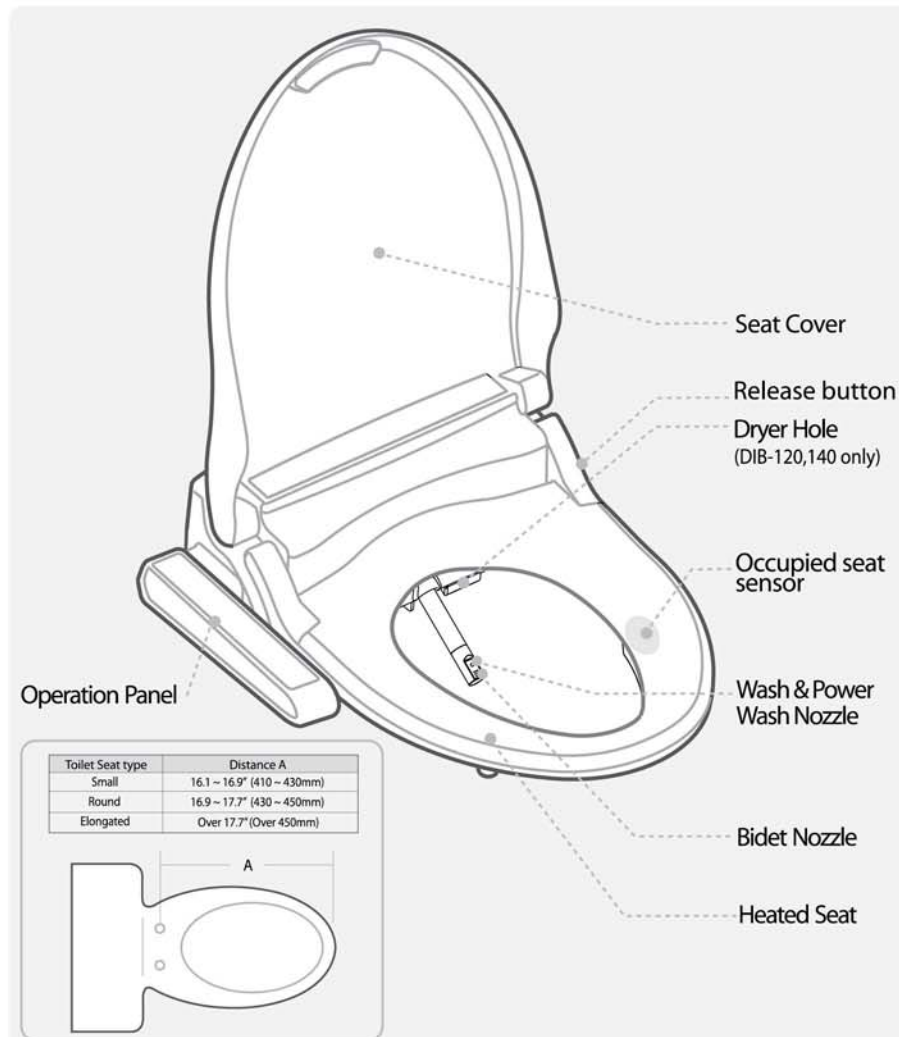

Operation Panel

Toilet Seat type	Distance A
Small	16.1 ~ 16.9" (410 ~ 430mm)
Round	16.9 ~ 17.7" (430 ~ 450mm)
Elongated	Over 17.7" (Over 450mm)

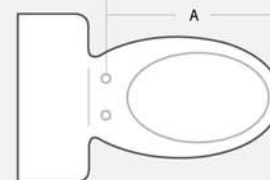


※ Occupied seat sensor

- The occupied seat sensor must be activated to operate the unit.
- The unit will work without activation of occupied seat sensor if this function is released intentionally.
- Refer to page No. 18.

03. Designation of Each Component

Operation Panel

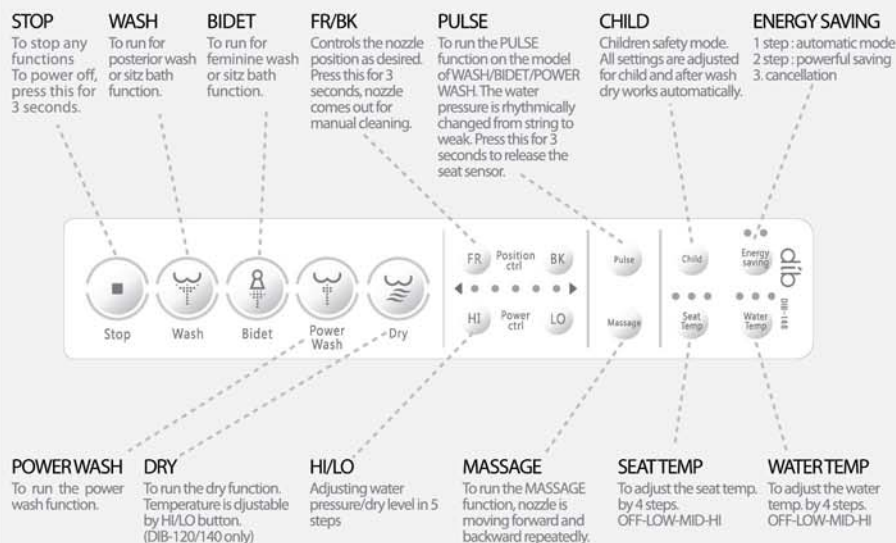

Accessories




04. Installation

Order of Installation

- 1 Remove the seat from the existing toilet body.
 - ▶ Release the nuts, and then remove the seat and cover from it.
 - ▶ Keep the removed seat, cover and nuts well in a proper place.




- 2 Close the water feed valve by turning it clockwise, and then drain the toilet water tank out.

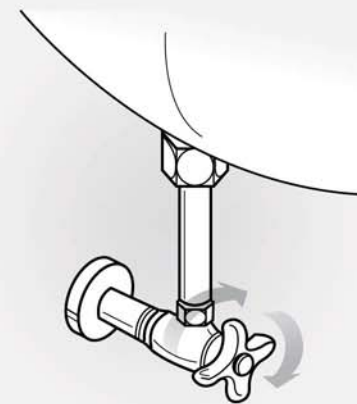

- 3 Remove the water feed pipe and then install T-valve.
 - ▶ Keep the removed water feed pipe well in a proper place. It may be useful when moving house to other place later.




- 4 Connect the toilet-use hose.

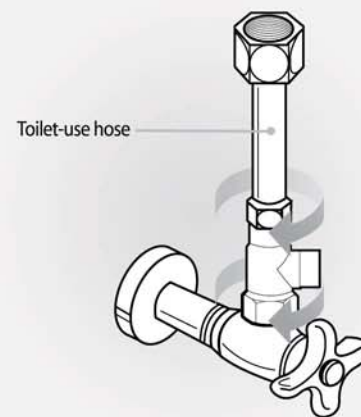


04. Installation

5 Fix the bracket onto the toilet first.

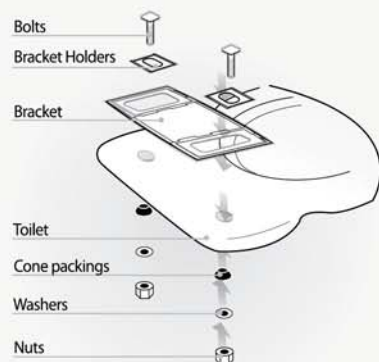


► Adjust the seat and the front part of toilet back and forth so that they can correspond with before fastening the nuts.

6 Push the main body toward the bracket completely.

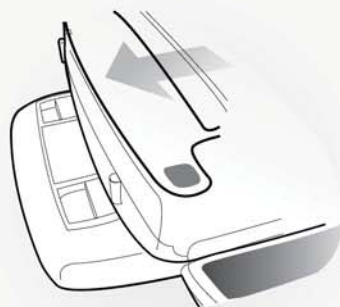


► Push it in until it sounds 'click'.
► When the product is not installed well, it may cause leakage.

7 After installing the filter onto the T-valve, connect the bidet-use hose to the bidet body.

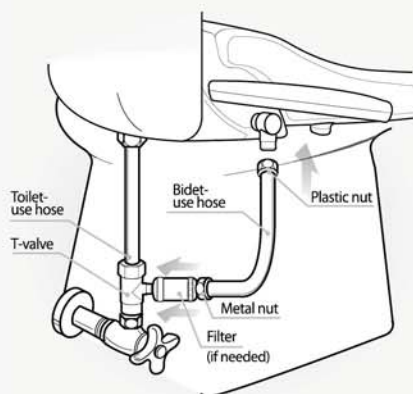


8 Insert the deodorizing cartridge into the bidet body. (DIB-140 only)

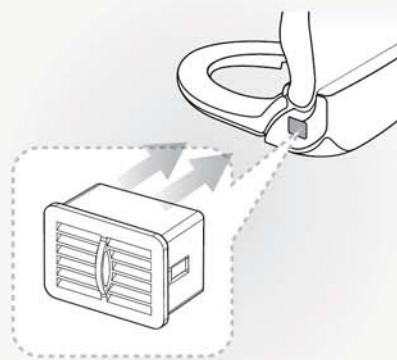


05. Trial Operation

Order of Trial Operation

1 Open the water feed valve by turning it anti-clockwise.

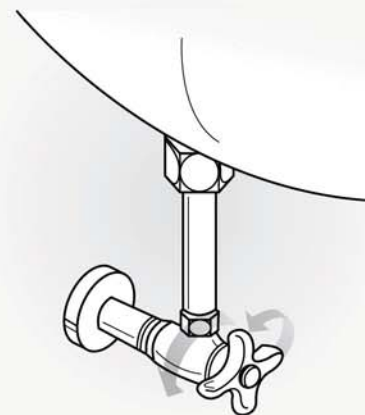


2 Be sure of no leakage around the hose connection.

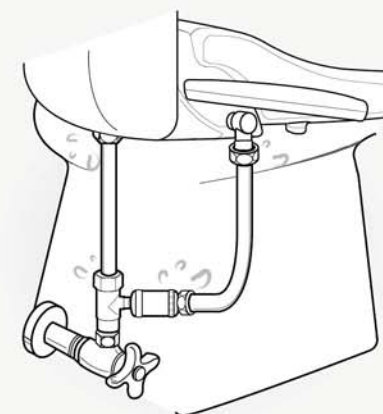


3 Be sure that nozzle comes out and retracts when powered on.

► Don't plug the power cord with wet hands.
Risk of electric shock.

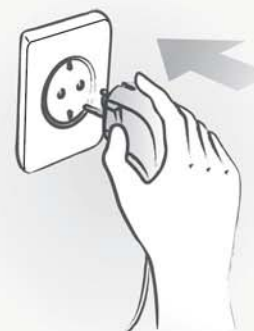

4 When the unit is powered on, water tank will be filled immediately. The unit will beep until the water tank is fully filled up with water.

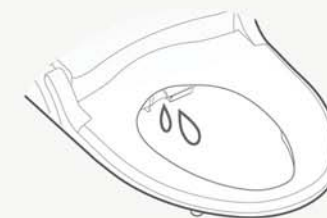

06. How to Use the Product

Basic Operation Method

1 Sit on the toilet seat.

- ▶ Be sure to sit on the user sensor of seat.
If the sensor is not occupied, functions will not work.



2 Press WASH, BIDET, Power wash buttons.

- ▶ Selected function can be used as desired.
- ▶ Sitz bath is possible in the mode of WASH and BIDET.
Press WASH or BIDET button again for sitz bath.
e.g.) WASH + WASH = WASH SITZ BATH
BIDET + BIDET = BIDET SITZ BATH



5 MASSAGE Wash

- ▶ When Pressing the MASSAGE button, nozzle location will be changed back and forth to wash the wider range.
- ▶ Press this button for 3 seconds to release the occupied seat sensor intentionally.

Massage

6 PULSE Wash

- ▶ When pressing PULSE button during the operation of WASH, BIDET and Power wash, water pressure will repeat HIGH/LOW level for smooth pulsating wash.
(Massage is not available in Sitz bath mode)

Pulse

3 Press the DRY button

- ▶ Hot air indicator lamp will light on.
- ▶ Dryer works for 3 minutes.
- ▶ It is recommended to wipe out the water on your bottom before operating the dry function for improving dry effect. (DIB-120, 140 only)



4 Press the STOP button.

- ▶ Any operation will stop.
- ▶ Press STOP for 3 seconds to turn off the unit while not seated.



7 Water Pressure Control

- ▶ Pressing HIGH/LOW button enables the control of water pressure.
- ▶ When any foreign material blocks the water filter, it may cause the low water pressure.
Regularly check the water and screen filter.



8 Nozzle Position Control

- ▶ Nozzle position can be controlled by pressing FR/BK.



06. How to Use the Product

Basic Operation Method

9 CHILD Function

- ▶ All settings are adjusted for child and after wash dry works automatically.
- ▶ Nozzle moves forward more than adult wash.
- ▶ Water pressure is weaker than adult wash.
- ▶ Seat temperature is set at lower than adult setting.

Child

10 Seat Temperature Control

- ▶ When pressing the SEAT TEMP. CONTROL button, the temperature of seat can be controlled within the range of room temperature, OFF-LOW-MID-HI

Seat
Temp

11 WATER TEMP CONTROL

- ▶ When pressing the WATER TEMP. CONTROL button, the temperature of water can be controlled within the range of room temperature, OFF-LOW-MID-HI

Water
Temp

12 ENERGY SAVING Function

- ▶ Automatic Energy Saving Function
 - # When pressing the button once, it enters into automatic energy saving mode (Yellow LED lamp lights on)
 - # Seat temperature will be kept at 32°C.
 - # When sitting on the seat to use bidet, it turns to the pre-designated temperature; When getting out of the seat, it returns to the automatic energy saving mode.
- ▶ Power Energy Saving Function
 - # When pressing the button twice, it enters into the Power Energy Saving mode. (Green LED lights on)
 - # Seat will not be heated at all for maximizing energy saving effect.
 - # When sitting on the seat to use the product, it turns to the pre-designated temperature. As soon as leaving the seat, it returns to power energy saving mode.
- ▶ When pressing the button three times, the energy saving mode will be released.

13 Nozzle Cleaning

- ▶ While not sitting on the seat, and pressing the FR button three seconds, the nozzle will move forward at its maximum distance so that the user can clean it easily (It will return after 2 minutes)
- ▶ When pressing STOP button, the nozzle will return and operate self-cleaning operation.

Longer than
3 seconds

FR

14 Deodorizing function (DIB-140 only)

- ▶ When sitting on the seat, automatically the deodorizing function starts.
- ▶ After the usage of bidet, the deodorizing function will operate for one (1) minute.
- ▶ Automatic deodorizing function can be released by pressing STOP + Energy saving button while not seated.



Consult your doctor before using Power Wash function in situations of anal disease/surgery.

Do not throw away

We are committed to protect the environment. Please help us by disposing of this product in a responsible way when it reaches the end of its service life, to prevent certain substances contained in electric and electronic products from harming public health or the environment. The symbol means that the products may not be thrown away with other household waste: at the end of its service life, it may be taken at no charge to you to the waste-collection centers provided for the purpose by the authorities in your country. It may be taken to the distributor from whom you purchase a new product that is equivalent to or that performs the same functions as this product. This later option may not be available in some countries.



07. User Settings

● : Seat Switch 'Off' Status ○ : Seat Switch 'On' Status ◐ : Regardless of On/Off

No	Function	Seat Status	Switch Operation	Description	Initial Status
1	Operating Signal Cancel	●	Press MASSAGE for 3 sec.	Use when turning off the operating signal	Operating Signal is turned on
2	Turning off	●	Press STOP button for 3 sec.	Press one of STOP, WASH, BIDET and POWER WASH to turn on the unit.	
3	Manual nozzle cleaning	●	Press FR button for 3 sec.	To clean the nozzle manually.	
4	Seat occupied sensor release	●	Press MSAAGE button for 3 sec.	To release the seat sensor intentionally.	○
5	Automatic deodorizing ON/OFF	◐	Press STOP button and press ENEGY SAVING button.	To release automatic deodorizing fuction intentionally.	○

*The unit will work without activation of occupied seat sensor if occupied seat sensor is released intentionally.

*Some of functions that must be set while not seated are not available to control unless occupied seat sensor release function is released.


*Deodorizing function will not work if occupied seat sensor release is activating.

dib

08. Maintenance & Cleaning

Cleaning of Water pipe filter

- 1 Close the water feed valve by turning it clockwise.
- 2 Disconnect the water supply hose. Take the screen filter out and clean it with soft brush. (e.g. toothbrush)
- 3 After cleaning, place it back. Then connect the water supply hose.
- 4 Open the water feed valve by turning it anti-clockwise.

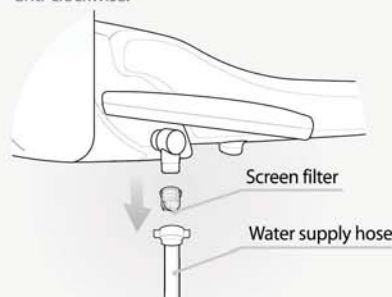

Cleaning of Bidet Body

- 1 Exterior surface of bidet is made of plastic material, which may be damaged by scrubber, chemicals, etc.
- 2 Wipe the surface with a soft cloth wet and squeezed completely. Don't spray water directly onto the surface with the bath-use shower device.
- 3 Clean the body after removing the power plug from the outlet. Be sure no water splash to the power plug or outlet.
- 4 Don't touch the power outlet with wet hand. Risk of electric shock.




Cleaning of Nozzle

- 1 Press FR button for 3 seconds while not seated. The nozzle will move forward and stop for 2 minutes.
- 2 Clean the nozzle with a unused toothbrush, etc., and press the STOP button, then it will return to the original place for self cleaning.



Drainage of Hot Water Tank

- 1 Remove the power plug from the outlet.
- 2 Close the water feed valve by turning it clockwise.
- 3 Press the release button on the side of main body. To prevent freezing, drain the water if unit is not used for extended period in winter.

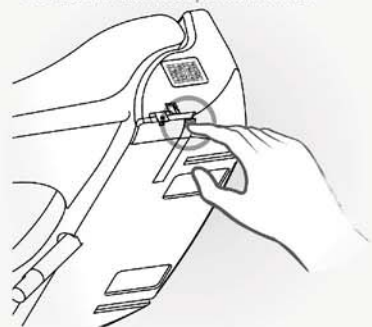

09. Before requesting repair

※ Please check the following points before requesting the repair of the product.

Signs to occur	Matters to be checked
Completely out of operation	<ul style="list-style-type: none"> • Check if the power plug is not connected. • Check the power failure.
Water does not spray out	<ul style="list-style-type: none"> • Check if the water supply is suspended. • Check if water feed valve is locked • Check if nozzle is blocked by foreign material • Check if connection hose is bent
Water pressure is low	<ul style="list-style-type: none"> • Check if water pipe filter is blocked by foreign material. • Check if the water pressure is set at too low level
Water is not warm enough	<ul style="list-style-type: none"> • Check if its temperature is set at 'Off' or 'Low'.
Seat is not warm enough	<ul style="list-style-type: none"> • Check if its temperature is set at 'Off' or 'Low'

Self-Diagnosis Table

※ When any abnormal phenomenon occurs, please refer to the following table, and inform the exact status at the time of requesting A/S service.

No	Self-Diagnosis Phenomenon	Way of Indication
1	Water temp sensor is disconnected or not inserted	LED of water temp. Yellow + Green blinking
2	Water temp sensor is short-circuited or over-heated	LED of water temp. Red + Yellow blinking
3	Seat temp sensor is disconnected or not inserted	LED of seat temp. Green blinking
4	Seat temp sensor is short-circuited or over-heated	LED of seat temp. Red blinking

10. Product Specifications

Item			DIB-140	DIB-120	DIB-100
Rated Voltage			AC 120V,60Hz		
Max. Consumption Power			1270W		
Power Cord Length			1.5m		
Water Feed Method			Direct connection		
Water Pressure			0.7~7.5kgf / cm ²		
Wash	Feeding Volume	Wash	0.6 ℓ/min		
		Bidet	0.7 ℓ/min		
		Power Wash	0.5 ℓ/min		
	Water Pressure Control		5 levels		
	Temp. Control		4 levels (Off, Low, Mid, Hi)		
	Heater Capa.		1200W		
	Safety Device		Thermal fuse, Thermal switch, Bi-metal		
Heated Seat	Temp. Control		4 levels (Off, Low, Mid, Hi)		
	Heater Capa.		55W		
	Safety Device		Thermal fuse		
Dry	Temp. Control		Room temp.~50°C		-
	Heater Capa.		250W		-
	Safety Device		Thermal fuse, Bi-metal		-
Deodorizer			Catalytic carbon filter	-	
Product Dimension ※ inch(mm)	Elongated		18.5"(470) X 20.8"(528) X 5.7"(145)		
	Round		18.5"(470) X 19.5"(496) X 5.7"(145)		
	Small		18.5"(470) X 18.5"(470) X 5.7"(145)		
Product Weight /Gross weight ※ lb(kg)	Elongated		10.6(4.8) / 17.3(7.8)	10.4(4.7) / 16.9(7.7)	9.9(4.5) / 16.5(7.5)
	Round		10.5(4.7) / 17.1(7.6)	10.3(4.6) / 16.7(7.5)	9.8(4.4) / 16.3(7.3)
	Small		10.4(4.6) / 16.9(7.4)	10.2(4.5) / 16.5(7.3)	9.7(4.3) / 16.1 (7.1)

11. Comparison Chart

	Function	DIB-140	DIB-120	DIB-100
Wash/Dry Function	Wash	●	●	●
	Bidet	●	●	●
	Power Wash	●	●	●
	Dry	●	●	
	Bubble Wash	●	●	●
Convenient / Comfort Function	Automatic Energy Saving	●	●	●
	Power Energy Saving	●	●	●
	Massage	●	●	●
	Pulse	●	●	●
	Advanced conventional heating	●	●	●
	Warm Seat	●	●	●
	Soft Closing Lid & Seat	●	●	●
	Detachable Main Body	●	●	●
	Child	●	●	●
	Deodorizer	●		

■ Dimension diagrams

inch (mm)

